# Remove Grain Drawer and Locate Shipping Brackets



# Remove Shipping Brackets before use!!!!

5. Loosen hex bolt from the shipping locked location.

Figure 6

## Loosen Hex Bolt from Bracket



6. Remove hex bolt and set aside.

Figure 7

## Remove Hex Bolt



7. Press down on the bracket to release.


Figure 8

Press Down on Bracket



Figure 9

### Slide Bracket Forward

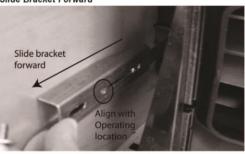

Insert hex bolt into operating location hole and securely tighten using the Allen wrench.

Figure 10

### Insert Hex Bolt and Tighten



- 10. Perform the same procedure to the other bracket.
- Once both brackets are securely tightened to the operating location, place unit upright.

IMPORTANT: If for any reason this unit is shipped or transported, the hex bolts should be removed from the operating location and secured back to the shipped locked location to protect the measurement cell during transit!